

Relubrication Instructions 6722 Series Meter Bar

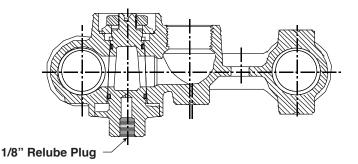

NOTE: These valves are designed for use with natural, manufactured or LP gas only.

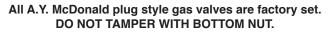

- 1. A.Y. McDonald 6722 Series Meter Bars may be re-lubricated in the full open or the full closed position when the valve is pressurized or unpressurized.
- 2. Remove the 1/8" NPT Allen Head pipe relube plug from the re-lubrication port in the head of the valve plug.
- 3. Fill the lube port with A.Y. McDonald approved lubricant and re-tighten the 1/8" pipe relube plug to move grease into the lubrication channels of the valve. Repeat as required to allow the valve to turn freely.

NOTE: Replacing the 1/8" relube plug with a standard 1/8" grease zerk will also allow easy re-lubrication of these valves. In either event, care should be taken to prevent over-lubrication.

4. After re-lubrication, the 1/8" Allen Head pipe relube plug should be securely replaced in the relube port in the head of the valve plug.

A small amount of gas leakage may be observed during this procedure, depending on the amount of lubrication already in the valve body.

NOTE: Commercially available relube tools can be used. Check with A.Y. McDonald before using.

A.Y. McDONALD MFG.CO. • P.O. BOX 508 • DUBUQUE, IA 52004-0508 FAX 800-832-9296 • 800-292-2737