


Western Technology Inc.

9610 Brick Anti-Glare Kit Instructions

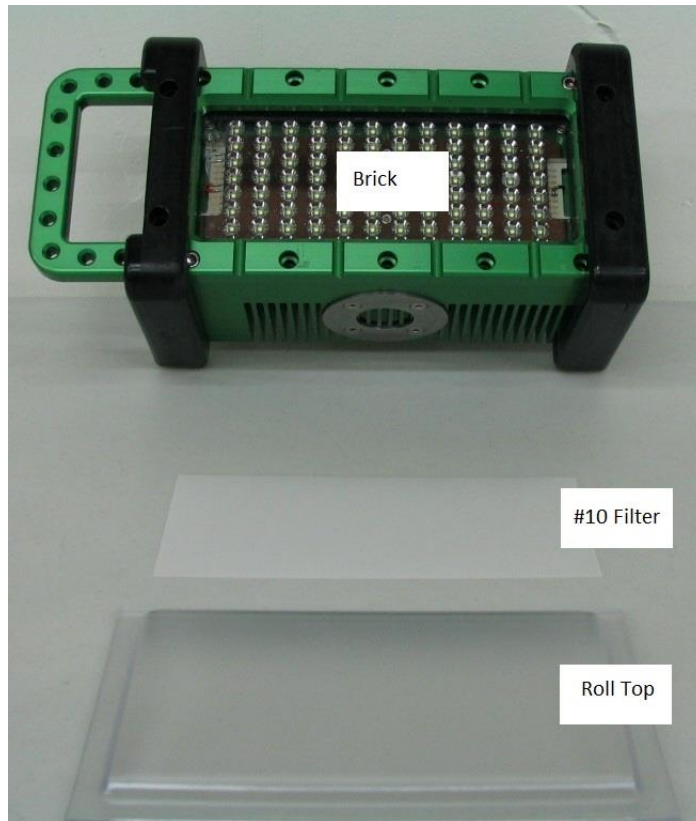

Un-plug Brick from Power. Do not look into illuminated brick.

Loosen and remove 2 bumper screws on handle end, requires 5/32" Allen Hex wrench. Push bumper toward handle end to make space between bumpers larger. Check for easy clearance- end to end – for the Roll Top.

Place the #10 Filter over the Brick Lens. Tuck corners in to make slight smooth curve that will stay in place.

Place Roll Top over brick and into slots in each bumper end. Replace screws in handle end bumper.



Brick with # 10 Filter installed.



Brick with #10 Filter and Roll Top installed.